BDSS[®]

BOSS PA-lift

PA-lift

The ultimate push around scissor lift

ADDENDUM to INSTRUCTION HANDBOOK (ORIGINAL INSTRUCTIONS)

> SAFE USE OF THE BoSS PA-lift OUTDOORS





Contents

Section 1 - Description	Page
1.1Introduction1.2Machine configurations1.3Intended use1.4Modifications	1 1 2 2
Section 2 - Specification	
2.1 Technical data	3
Section 3 - Safety rules	4
Section 4 - Operating instructions	
4.1 Daily checks	5

Section 1 - Description

1.1 Introduction

This BoSS PA-lift machine has been adapted for outdoor use where the wind speed does not exceed 12.5m/s (28mph).

As a result of this adaptation the maximum platform height of the machine has been limited to 2.6 metres.

This addendum provides information on the safe operation of the BoSS PA-lift outdoors and must be read in conjunction with the main Instruction Handbook (Original Instructions).

Before operating the BoSS PA-lift, you must ensure that you have been adequately trained in its use and have read and fully understood this addendum and the main Instruction Handbook (Original Instructions), paying particular attention to the Safety Rules in Section 3.

Additional copies of this addendum may also be obtained from the manufacturer; please see the contact details on the back cover. This addendum is also available to download from the manufacturer's website at www.bosspoweredaccess.com.

The information contained in this Instruction Handbook is based on the latest product information at the time of publication. The manufacturer operates a policy of continuous product improvement and reserves the right to make product changes at any time without notice.

1.2 Machine configurations

This machine may be used outdoors (or indoors where the cladding has yet to be installed on a building) in the following configurations:

- With Main Guardrail fitted
- With Main Guardrail with Main Guardrail Anti-Climb Guard fitted
- With Confined Space Guardrail fitted
- With Confined Space Guardrail with Confined Space Guardrail Anti-Climb Guard fitted

Section 1 - Description/continued

1.3 Intended use

The BoSS PA-lift has been designed to comply with the safety requirements of the European Machinery, Low Voltage and Electromagnetic Compatibility Directives and in accordance with EN 280:2013+A1:2015 Mobile Elevating Work Platforms - Design calculations - Stability criteria - Construction - Safety - Examinations and tests, and UKCA.

The BoSS PA-lift is a Group A Type 1 MEWP intended to lift one person (plus essential tools and materials) to enable work to be undertaken at height. This BoSS PA-lift has been designed for indoor and outdoor use and must be used on level ground which is able to support the weight of the machine and its maximum rated load (capacity).

The BoSS PA-lift is designed for a multitude of tasks including building and construction, particularly fit and strip out, shop fitting, painting and decorating, general maintenance, cleaning, as well as facilities management. The machine is used on construction sites and in hospitals, schools, airports, shopping centres, retail outlets, transport environments, factories, and offices.

WARNING

The operator must obtain the guidance and written approval from the manufacturer in the event of any special working methods or conditions which are outside those specified in this section.

1.4 Modifications

No modifications shall be made to any BoSS PA-lift unless the manufacturer has given full written approval. If in doubt, please contact the manufacturer for advice:

Werner UK Sales & Distribution Ltd. Blackwater Trading Estate The Causeway Maldon Essex CM9 4LJ United Kingdom ♥ +44 (0)1621 745900 ♥ +44 (0)1621 859845 ♥ uk.customercare@wernerco.com

BoSS PA-lift Instruction Handbook Addendum

Section 2 - Specifications

2.1 Technical data

Manual force	Metric	Imperial
Maximum allowable wind speed	12.5m/s	28mph

Dimensions		
Maximum safe working height	4.6m	15ft 1.1in
Maximum platform height	2.6m	8ft 6.4in

Section 3 - Safety rules

The operator of the BoSS PA-lift must read, understand, and adhere to the following safety rules and those in the main Instruction Handbook (Original Instructions) in every way.

NEVER make any addition to the BoSS PA-lift which would increase its wind load e.g. the addition of notice boards etc.

Section 4 - Operating instructions

4.1 Daily checks

Ensure that the warning tag, shown below, is fitted to the platform controller, and that it is not obscured, dirty or damaged.



BISS®

For further information and support for the BoSS PA-lift or any other products and services, please contact:

Werner UK Sales & Distribution Ltd. Blackwater Trading Estate The Causeway, Maldon, Essex, CM9 4LJ United Kingdom

> WernerCo Hungary. Kft. 6000 Kecskemét, Szt. Istvan Krt. 19 Hungary

🕲 uk.customercare@wernerco.com

 \bigoplus www.bosspoweredaccess.com

Werner UK Sales & Distribution Ltd. is a manufacturer member of:



PN125995 ©WernerCo Rev. A

